


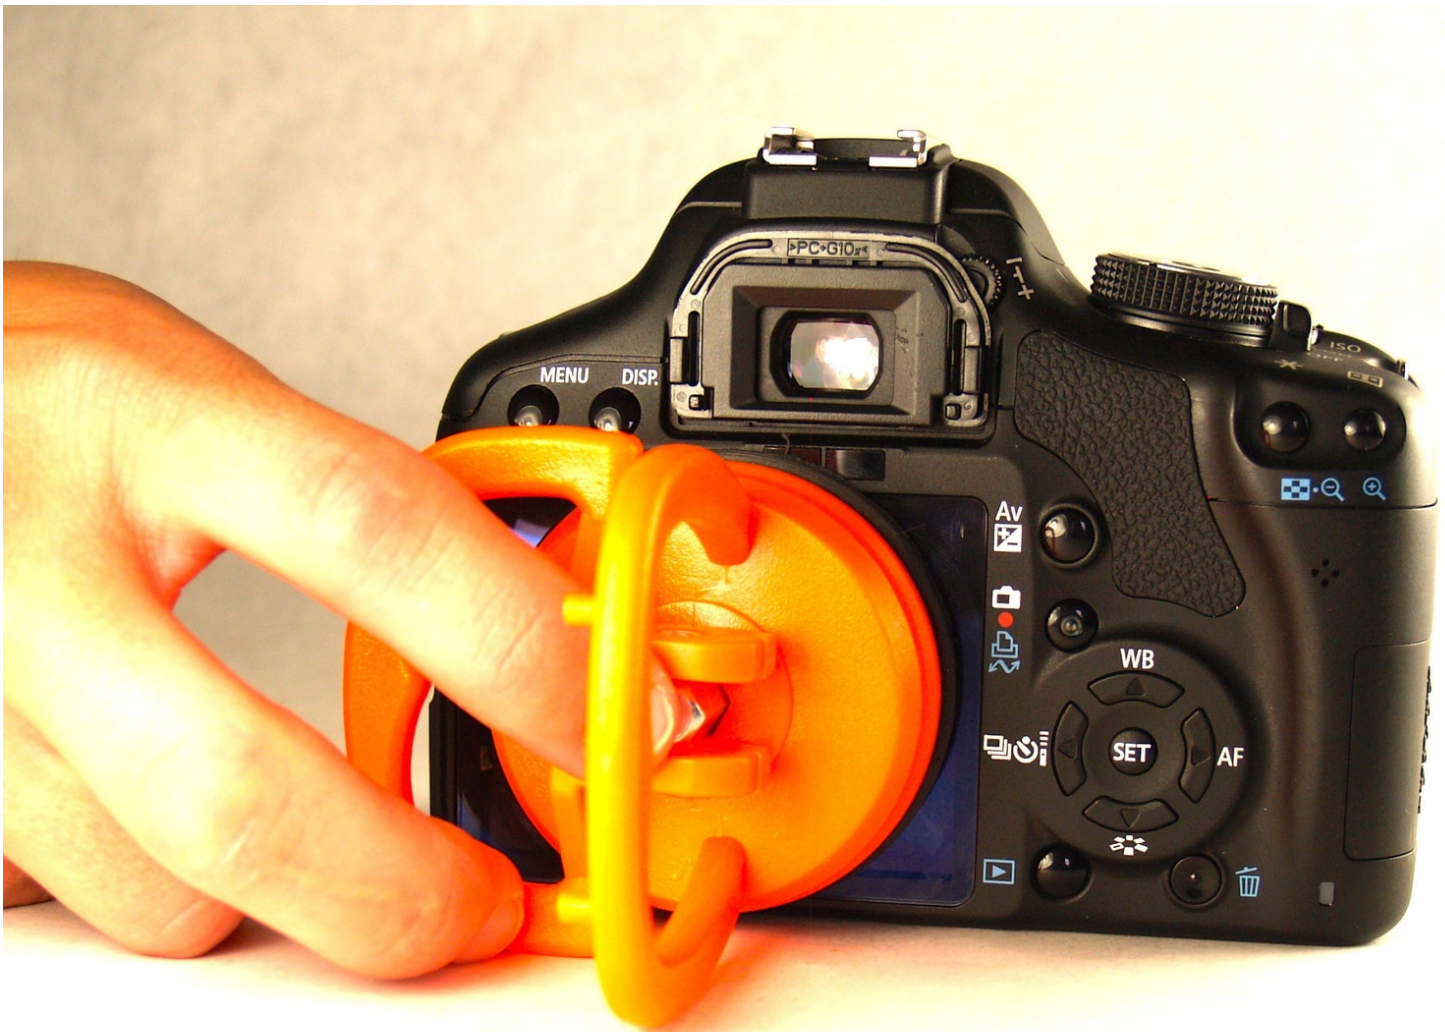

Canon EOS Rebel T1i Front Screen Replacement

If you see any cracks or scratches on your 3" screen fear not. It is possible to replace it following the steps provided on this guide.

Written By: Michael Peck



INTRODUCTION

This guide will take you through the steps to changing your screen and getting a clear view of your picture.



TOOLS:


- [Heavy-Duty Suction Cups \(Pair\)](#) (1)



PARTS:

- [Canon plastic 3" screen](#) (1)

Step 1 — Front Screen

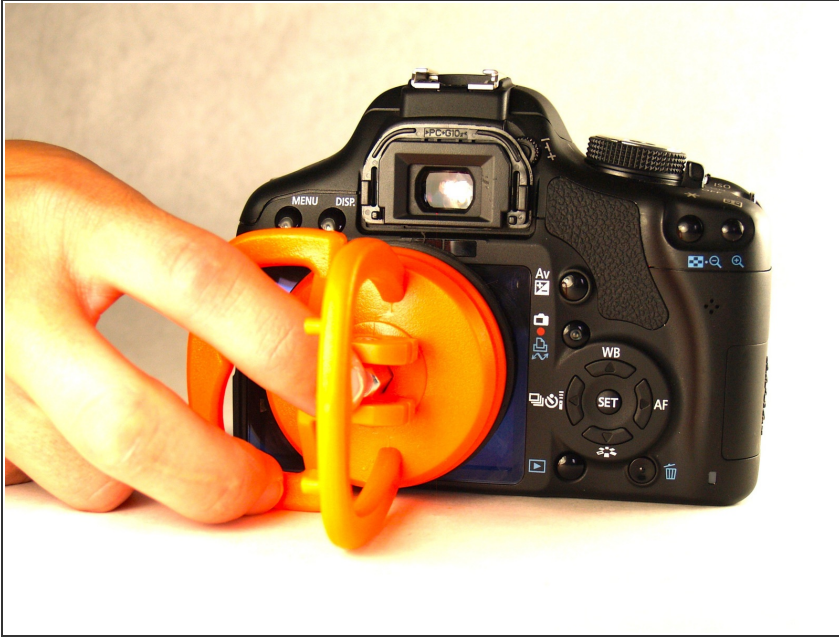


- Place the suction cup on top of the broken or cracked screen. For the best outcome, clean your screen before placing the suction cup on it.

Step 2



- While pressing the cup against the screen/camera, pull up the lever creating a vacuum on the empty space between suction cup and screen.
- The suction cup should be flat, just so you can grip your finger on the handle.

Step 3

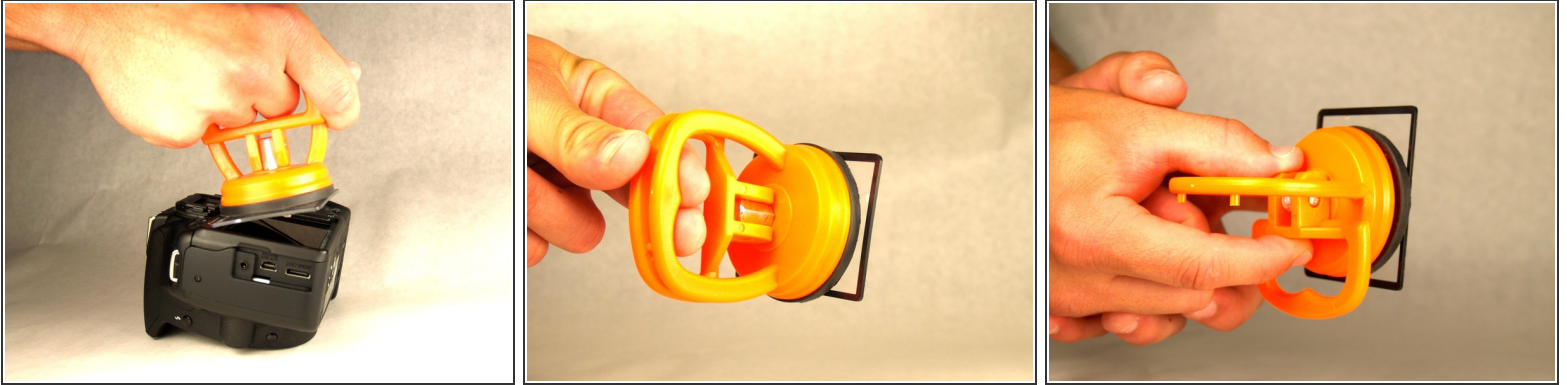

- Grab the handle of the suction cup and lift it up, gently, with an angle, like the picture shows.
- Take the plastic screen out of the camera, and the pull down the lever of the suction cup in order to release the broken screen

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-03 03:28:23 AM.